

IKE 3

User Guide



Introduction

IKE is a location-based measuring solution that will greatly increase your productivity when undertaking utility asset management surveys and related measurements.

With your IKE solution you can quickly:

- Collect geo-located pole photos
- Measure wire span heights, even across busy roads
- Determine wires clearances from vegetation or buildings
- Make accurate attachment height measurements on captured photos

This document will guide you through:

- Setting up your IKE system
- Making in-field measurements tasks
- Transferring data from the IKE device to your PC
- Measuring attachment heights from a photo
- Outputting data in industry standard file formats

What's in the Box

- IKE device with on-board measuring tools
 - Target Position, 3-Shot Height, Missing Line, Span Height, Tree Assessment, Local Point
 - Photo Only
 - TrueSize photos (if purchased)
- IKE desktop for
 - data management, custom forms, report generation
 - photo measurements (if TrueSize photos are purchased)
- Accessories
 - USB Cable, International Charger, 2 Batteries, 8GB SDHC Card, Screen Protector
 - Hardcase, Softcase, Travel Charger, Vehicle Charger, Glare Shield
 - Low-Magnetic Signature Tripod
- Documentation
 - IKE Fieldcraft Guide
 - IKE User Guide
- 1-year Hardware Warranty, Software Maintenance & Support



WARNING! Text set off in this manner indicates that failure to follow directions could result in user injury or unexpected data results.

IMPORTANT: Text set off in this manner indicates that failure to follow directions could result in damage to equipment or loss of information.

Note: Text set off in this manner indicates information that may be useful to the operation of your IKE device.

ActiveSync, Excel, Internet Explorer, Microsoft, Outlook, PowerPoint, Visual Studio, Windows, Windows Media, Windows Mobile, Windows Mobile Device Center, Windows XP, Windows Vista, Windows 7, and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

The Bluetooth® word mark is owned by the Bluetooth SIG, Inc. and any use of such marks by ikeGPS Ltd. is under license.

Acrobat and Reader are registered trademarks of Adobe Systems Incorporated in the United States and/or other countries.

The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

Copyright © 2015 ike^{GPS}. All rights reserved.



IKE System Overview



Setup System

Download and install the software from the IKE website onto your PC.



Configure IKE

Use the sample forms (located in the IKE desktop 'Sample Forms' folder) or create your own, and deploy these to your IKE device.



Capture Data

Measure objects in the field with your IKE device.



Download

Use IKE desktop to download the files from the IKE device to your PC.



Measure photos in IKE desktop

- Measure attachments from a IKE photo.
- Generate reports to review your results.



View Report Data

Create and view report data in IKE desktop.

System Setup

IMPORTANT: The following software and documentation are required to use your IKE. They are available as downloads from www.ikegps.com/support.

IKE Software



IKE desktop

IKE desktop makes file transfer from your IKE device simple. Customise and deploy forms directly to your IKE device and generate various file types from captured data. Make accurate pole measurements from photos and save marked-up photos.



IKE tools

The on-board measuring tools for your IKE. Your device has been shipped with the latest factory software - your installed version shows on the IKE device main screen. However the team at IKE is regularly making product improvements. To get the latest software releases with new tools, features and enhancements, regularly visit the www.ikegps.com/support page.

IKE Documentation



IKE User Manual

The most comprehensive A-Z guide to using your IKE device.



IKE Fieldcraft Guide

How to get the best results from your IKE, tips and tricks to improve performance, accuracy, and productivity

Additional Software



Microsoft ActiveSync or Mobile Device Center

Programs necessary for connection to the PC. Some systems will already have these preloaded. If not, you will need to install one (ActiveSync for XP or Windows Mobile Device Center for Windows 8, 7 or Vista).



Google Earth

Desktop your data and measurements by clicking on their location on aerial photographs.





IKE Tripod

We strongly recommend using a IKE Low Magnetic Signature Tripod, which provides a stable platform so you can obtain the most accurate results. The advantages of using this tripod are:

- additional stabilization is achieved, making it much easier to target poles and wires.
- movement is minimized, ensuring accurate measurements.
- the IKE Low Magnetic Signature Tripod has no effect on the IKE compass.


Tip: To ensure accuracy, we recommend performing a compass calibration after air travel with your IKE or before starting intensive measuring work. Refer to the **IKE User Manual** for details.

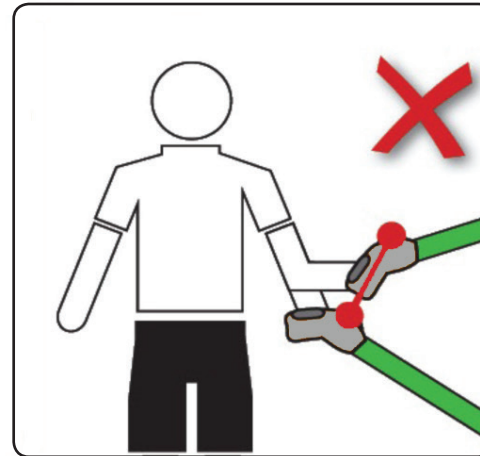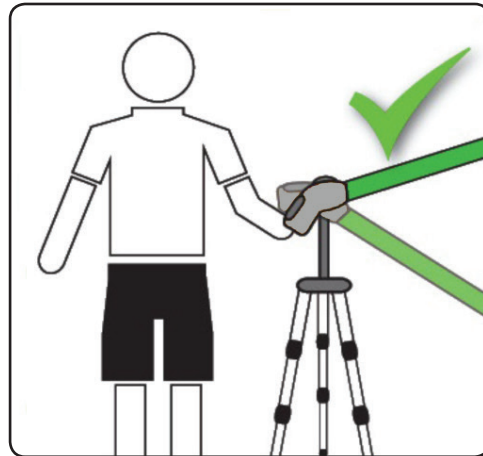

IMPORTANT: A normal tripod will introduce errors in target position and measurements.



IKE – How it Works

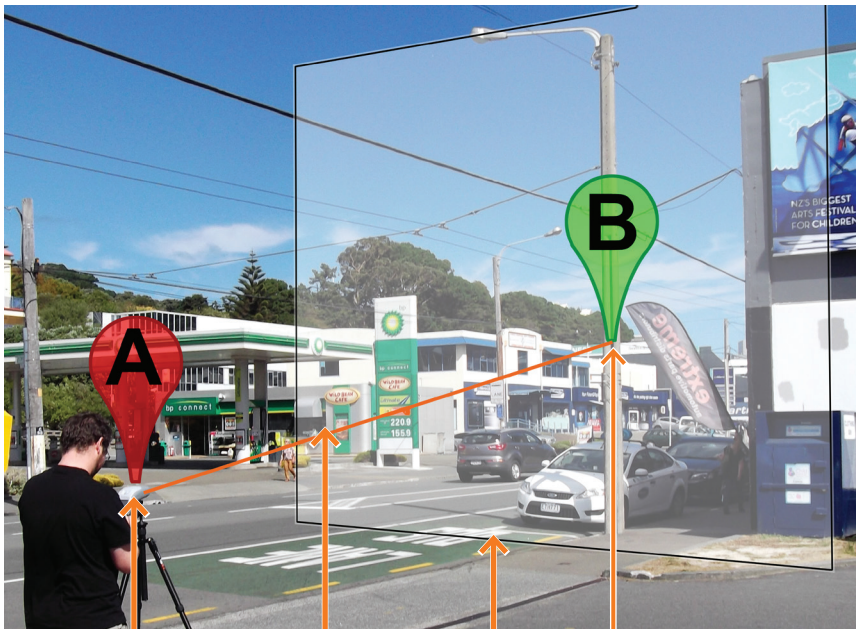


GPS location of
IKE Device

Distance to pole

Photo is taken
at the same time

GPS location of pole

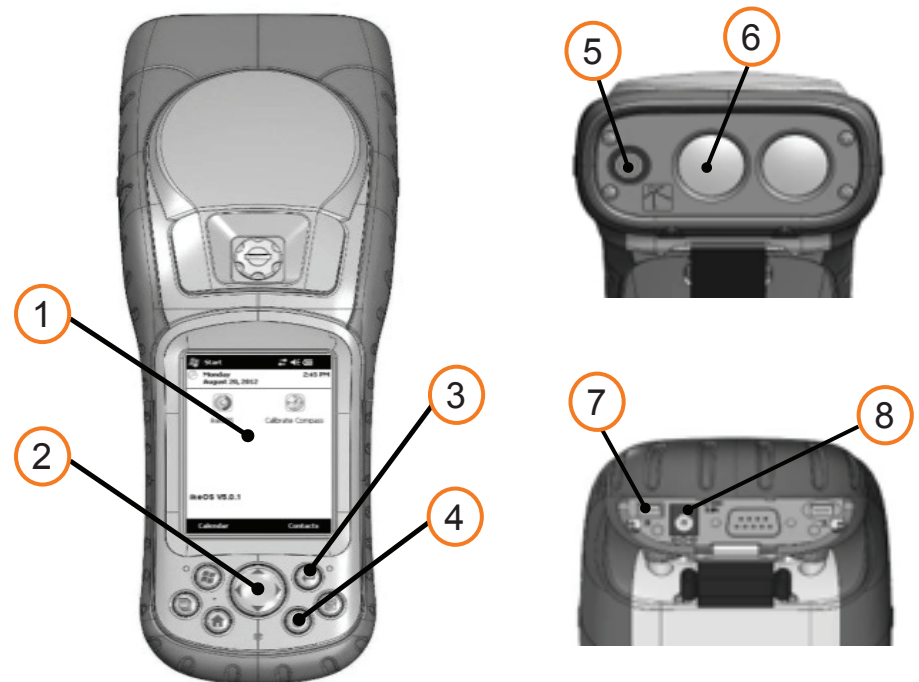

1. Touchscreen/LCD display
2. Four-way directional button
3. Enter button
4. Power button
5. Digital camera
6. Laser rangefinder
7. USB data transfer port
8. Power port



Navigating on IKE





Move up or down through lists



Select item in list



-  = or or
-  = or



Sample Forms

IKE desktop comes with a number of **Sample Forms** to get you up and running quickly and learn the basics of the system. Some of these sample forms are used in this training document as examples for the below scenarios.

Use IKE desktop to deploy these forms to your IKE device and develop a workflow that best suits your data collection needs.




Pole Audit Sample Form

- Add a Pole ID label
- Capture a full pole photo
- Add a comment



Wire Span Sample Form

- Add a wire span height
- Add an attribute: Road, Driveway, Pavement or Other.

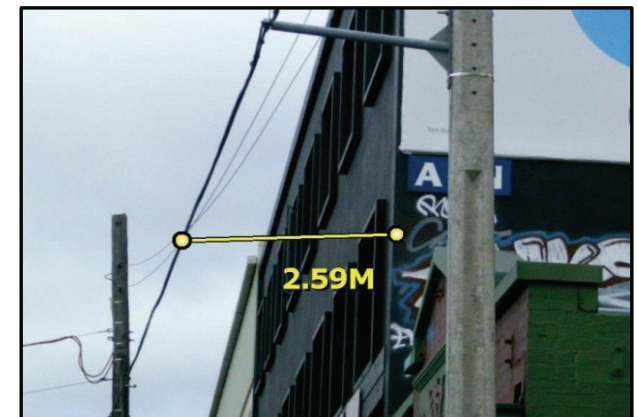

Wire Clearance Sample Form

- Measure a wire clearance
- Add a class: wire-vegetation, wire-building or wire-wire

Field Tips

- Charge before use.
- Practice on nearby poles and assets before venturing too far.
- Use the IKE Low Magnetic Signature Tripod (see page 5).

For further tips, see the **IKE Fieldcraft Guide**.



Capture Data with the Pole Audit Sample Form




Follow these steps to capture data using the Pole Audit Sample Form.

Here you will learn how to:


- Add a Pole ID label
- Capture a full pole photo
- Add a comment.

Tip:

Tasks can be completed in any order. Mandatory tasks are shown with a red star.

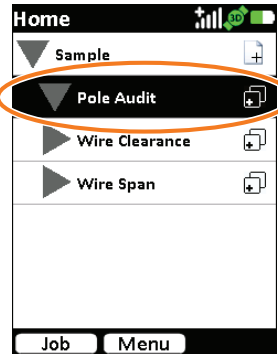


1. Tap **Pole Audit** to open this form.

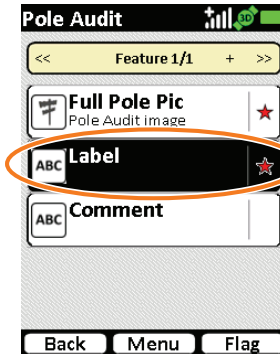


2. Tap **Label**.




3. Type in a pole ID label, then tap **OK**.

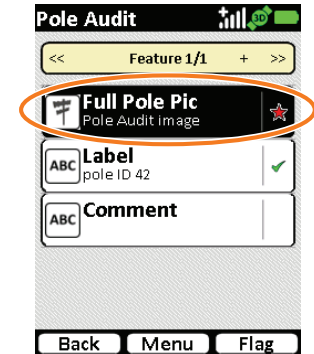

4. Tap **Full Pole Pic**.

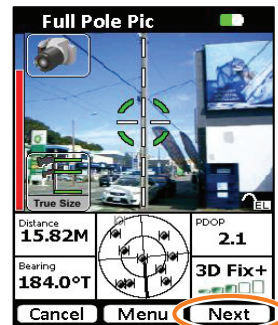


5. Aim at the pole and ensure that:
- the crosshairs hit the pole,
 - the vertical guide is aligned,
 - the entire pole is visible in the photo.
6. Tap **Next** to capture.

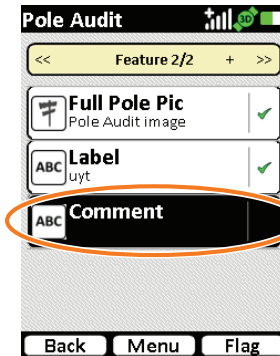

7. Tap **Comment**.



8. Type in any relevant comments, e.g. pole material, type, etc., then tap **OK**.

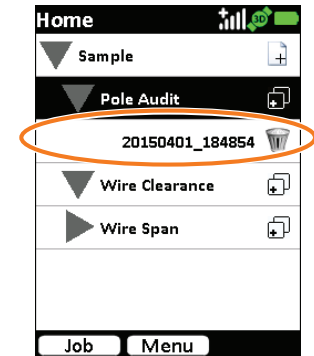

9. When all tasks have been completed, the pole item will be displayed on the screen.




Capture Data with the Wire Span Sample Form



Follow these steps to capture data using the Wire Span Sample Form.

Here you will learn how to:


- Add a wire span height
- Add an attribute: Road, Driveway, Pavement or Other.

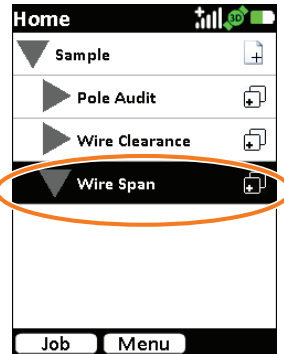


1. Tap **Wire Span** to open this form.



2. Tap **Span Height**.

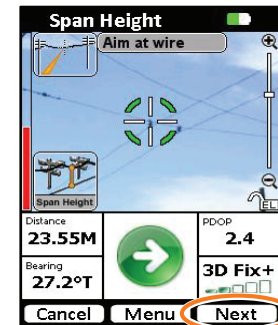


3. Aim your IKE at a wire, wait for the crosshair guide to turn green, then tap **Next**

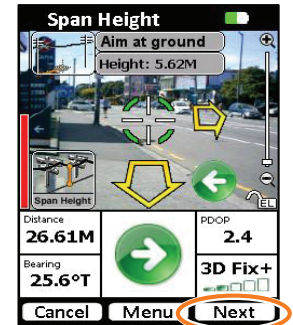


4. Follow the onscreen arrows to find the base point directly below the targeted wire point. Once arrows disappear, tap **Next** to capture the ground point.




5. Aim the camera so that it captures the entire overlaid measurement and tap **Next** to capture the photo.

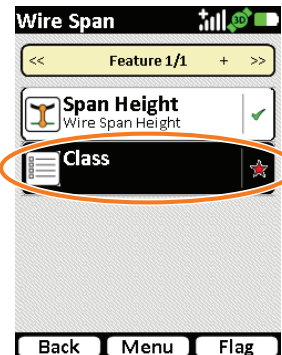

6. Tap **Class**.

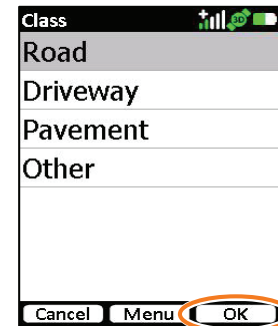


7. Select from the available options, then tap **OK**.

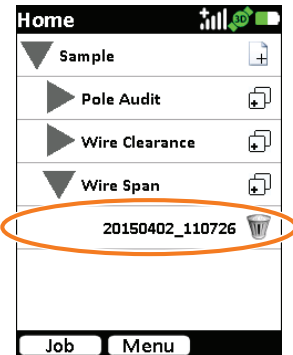

8. When all tasks have been completed, the wire span item will be displayed on the screen.



Capture Data with the Wire Clearance Sample Form

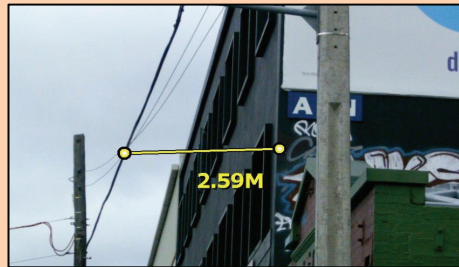


Follow these steps to capture data using the Wire Clearance Sample Form.

Here you will learn how to:


- Measure a wire clearance
- Add a class: wire-vegetation, wire-building or wire-wire.

Tip:


Use the green back (left) arrow to go back a step.

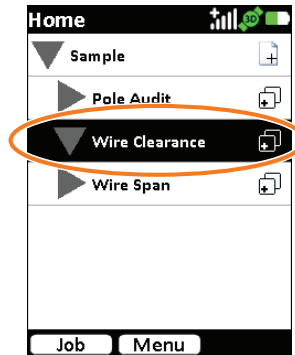


1. Tap **Wire Clearance** to open this form.

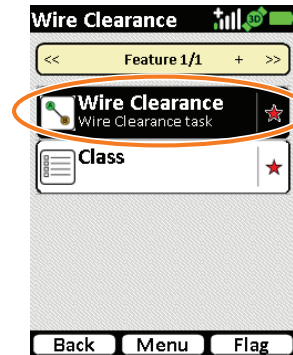

2. Tap **Wire Clearance**.

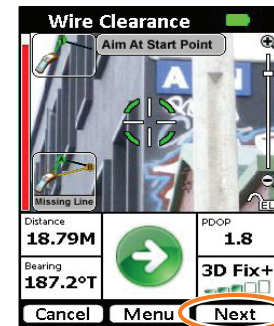


3. Set the start point by aiming at a point on a building, then tap **Next**.

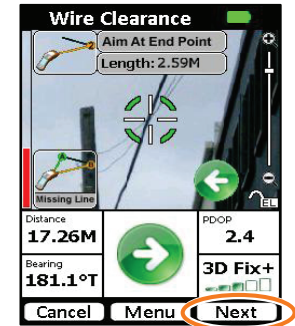


4. Aim at the desired end point on the wire, then tap **Next**.
Tip: To find the minimum distance, observe the **Length** readout while moving the laser along the wire.




5. Aim the camera so that it captures the entire overlaid measurement, then tap **Next** to capture the photo.

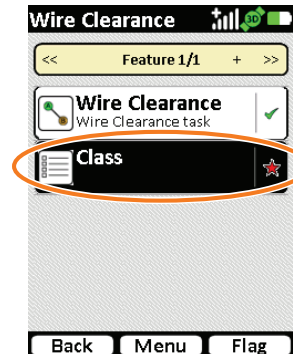

6. Tap **Class**.

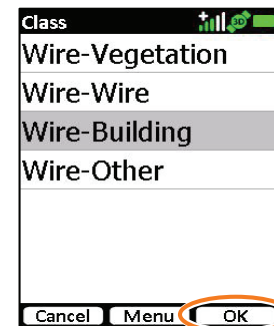

7. Select from the available wire clearance options, then tap **OK**.

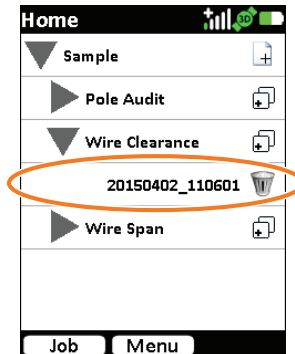


8. When all tasks have been completed, the wire clearance item will be displayed on the screen.




Download Files from IKE to PC

1. Plug in the USB and power cables.

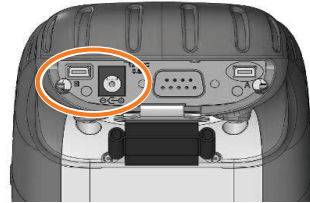

3. Start IKE desktop.

4. Click the **Reports** tab, then click **Import Job**.

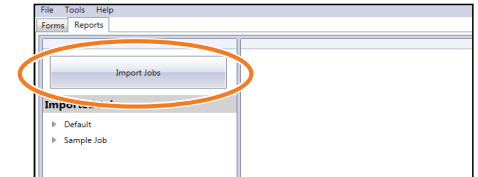


2. Wait for Windows to discover IKE.

- Windows should automatically find IKE on plugging in the USB cable, however if your PC fails to find the device it may be necessary to download additional Microsoft Windows connection software – either Windows Mobile Device Center or Windows ActiveSync. See www.ikegps.com/support.
- If using Windows Mobile Device Center, click **Connect without setting up your device**.




5. Check the job you want to import, then click **OK**. The data will be downloaded to the folder specified in IKE desktop Tools → Settings.

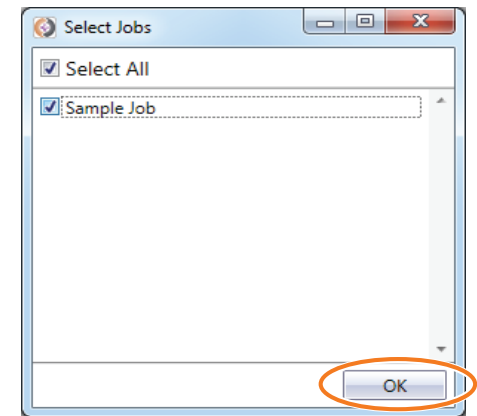



Generate Reports in IKE desktop

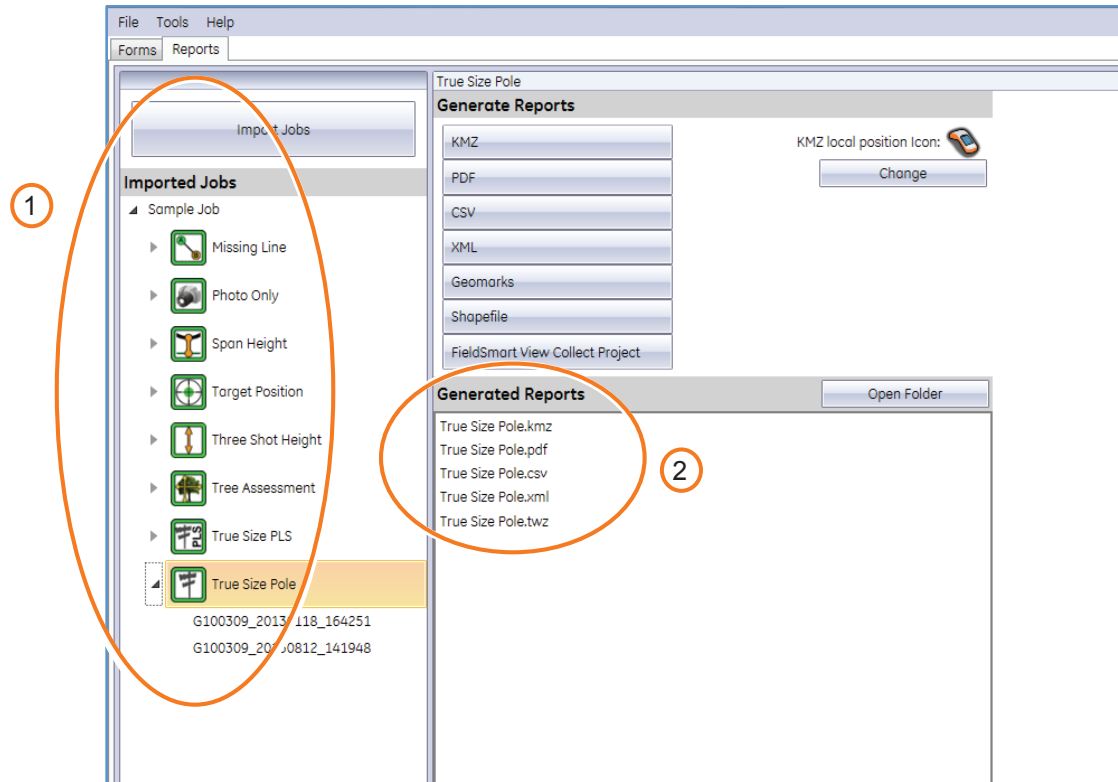

Generating Reports

1. Locate your job in the **Imported Jobs** panel.
2. Select the desired file format and click on the desired report.

IKE desktop automatically:

- generates the folder structure for the current job within the IKE desktop data folder.
- creates **Generated Reports** based on the configuration settings in **Tools** → **Settings** → **Reports**, or manually using the **Generate Reports** buttons.




Report Data



Google Earth (KMZ) Format


In the **Reports** tab of IKE desktop, double-click on the **.kmz** file.

By clicking on the Pole icon in Google Earth, you can view the associated JPG photo along with other captured data.

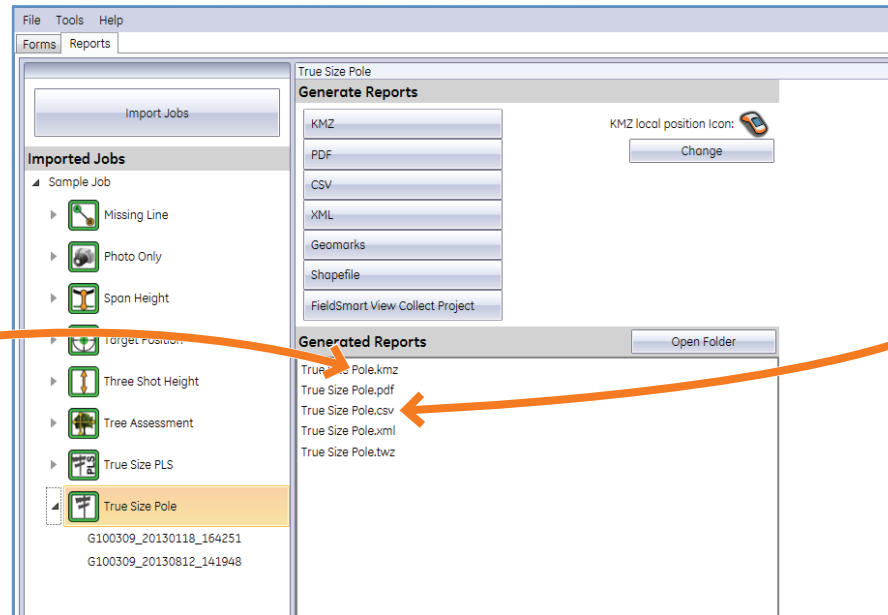

Spreadsheet (or database import) CSV Format

Double-click the **.csv** file to view as a spreadsheet.

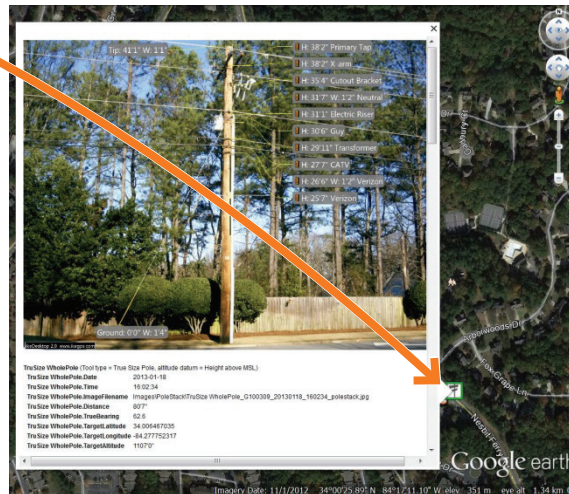

Note: To include pole attachment data, simply regenerate the reports after performing your measurements.




Report Data



GeoPDF (TWZ) Format



Double click the .twz file to create a GeoMark for viewing in a GeoPDF.

By clicking on the arrow in the GeoPDF you can view the associated JPG photo.

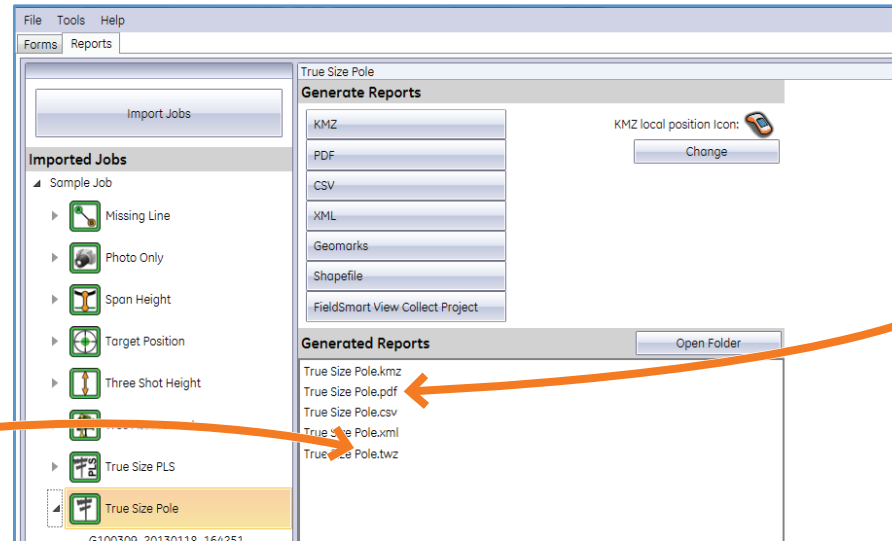

Adobe PDF Format

In the **Reports** tab of IKE desktop, double-click on the .pdf file.

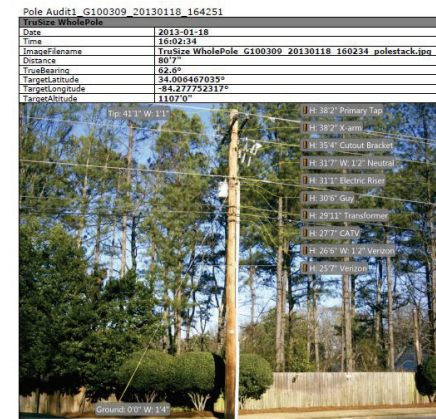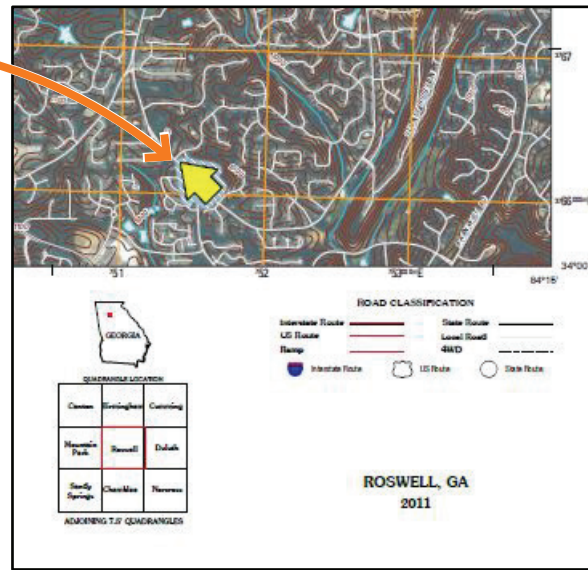

Note: To include pole attachment data, simply regenerate the reports after performing your measurements.





Report Data

SHP format (Shapefiles)

In the **Reports** tab of IKE desktop, double-click on the **.shp** file.

By clicking on the icon, you can view the associated attribute information from the shapefile.

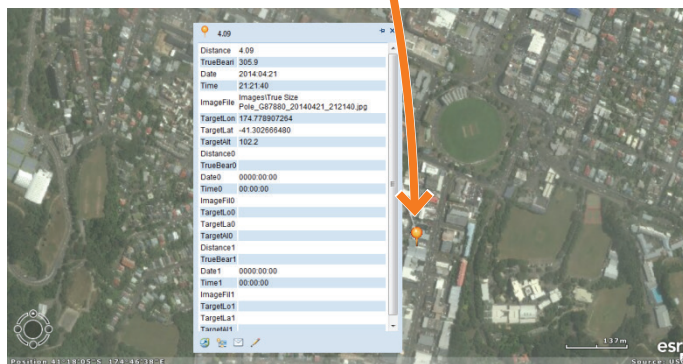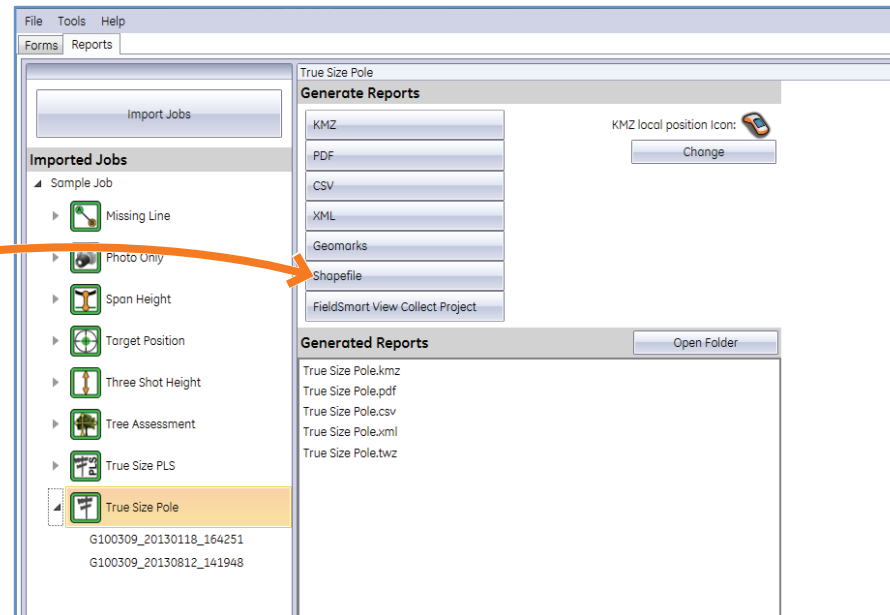

Note: To include pole attachment data, simply regenerate the reports after performing your measurements.




Measuring in IKE desktop

Note: *Photo measuring capability is only available to customers with a TrueSize photo license.*

- IKE desktop software enables you to effectively measure the heights and widths of pole attachments from your IKE photos.
- Use the TrueSize photo included in your sample data to measure pole attachments.
- Open IKE desktop and click on Reports → Sample Job → TrueSize Pole and click on a photo.



Measuring Photos in IKE desktop

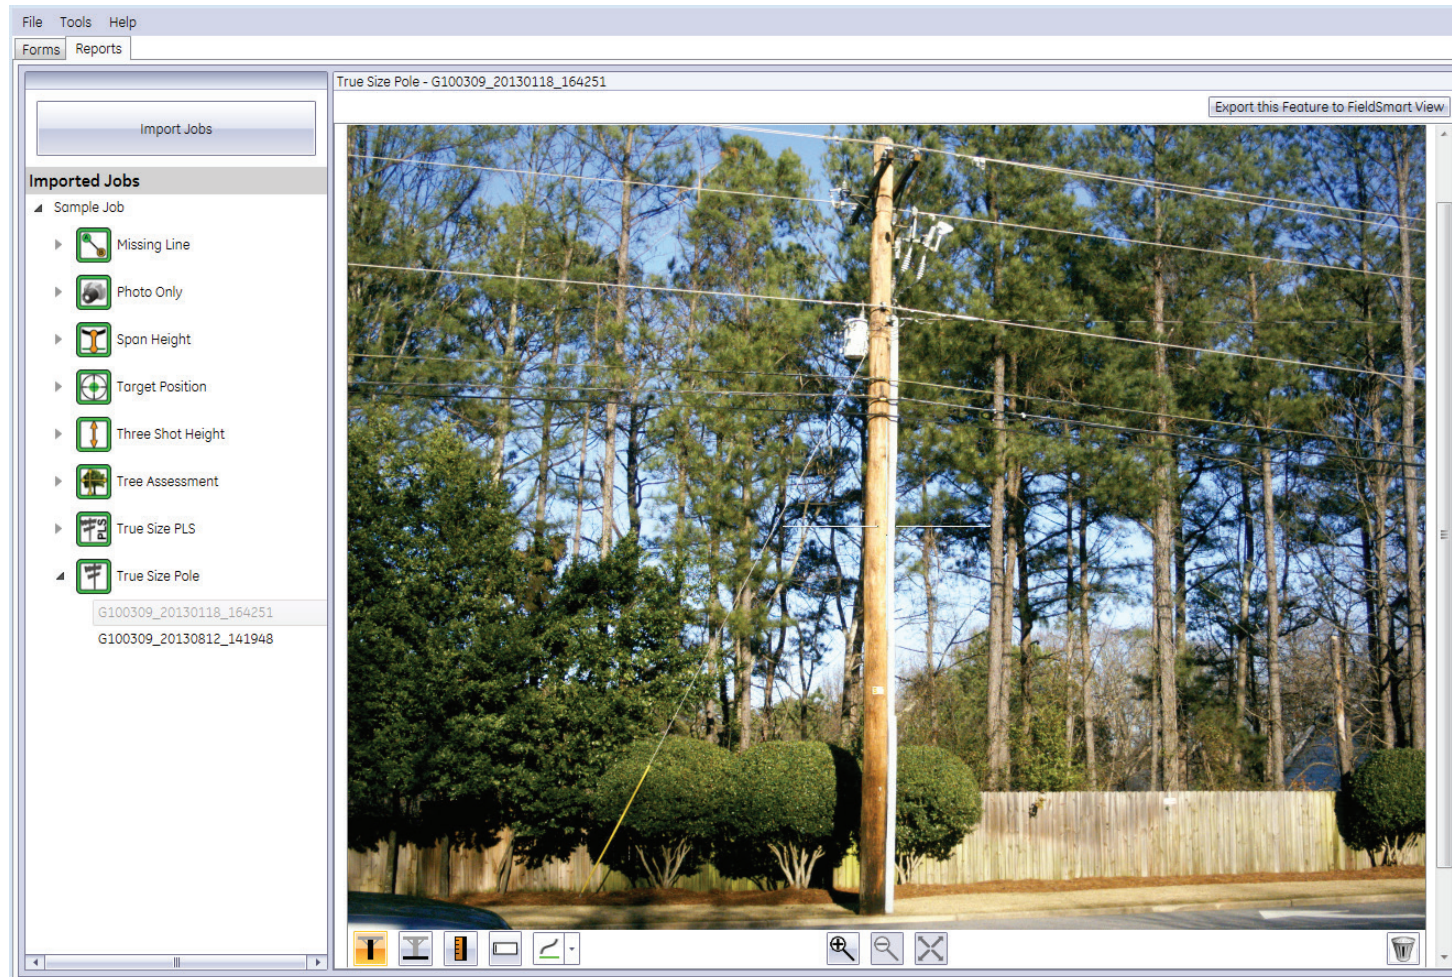

1 2 3 4 5

6 7 8


9

IKE desktop Measurement Icons

1. Set the tip of the pole
2. Set the ground level
3. Measure attachment heights
4. Add labels to the photo
5. Adjust line color
6. Zoom In
7. Zoom Out
8. Desktop original extent
9. Delete all



Measuring Attachment Heights in IKE desktop

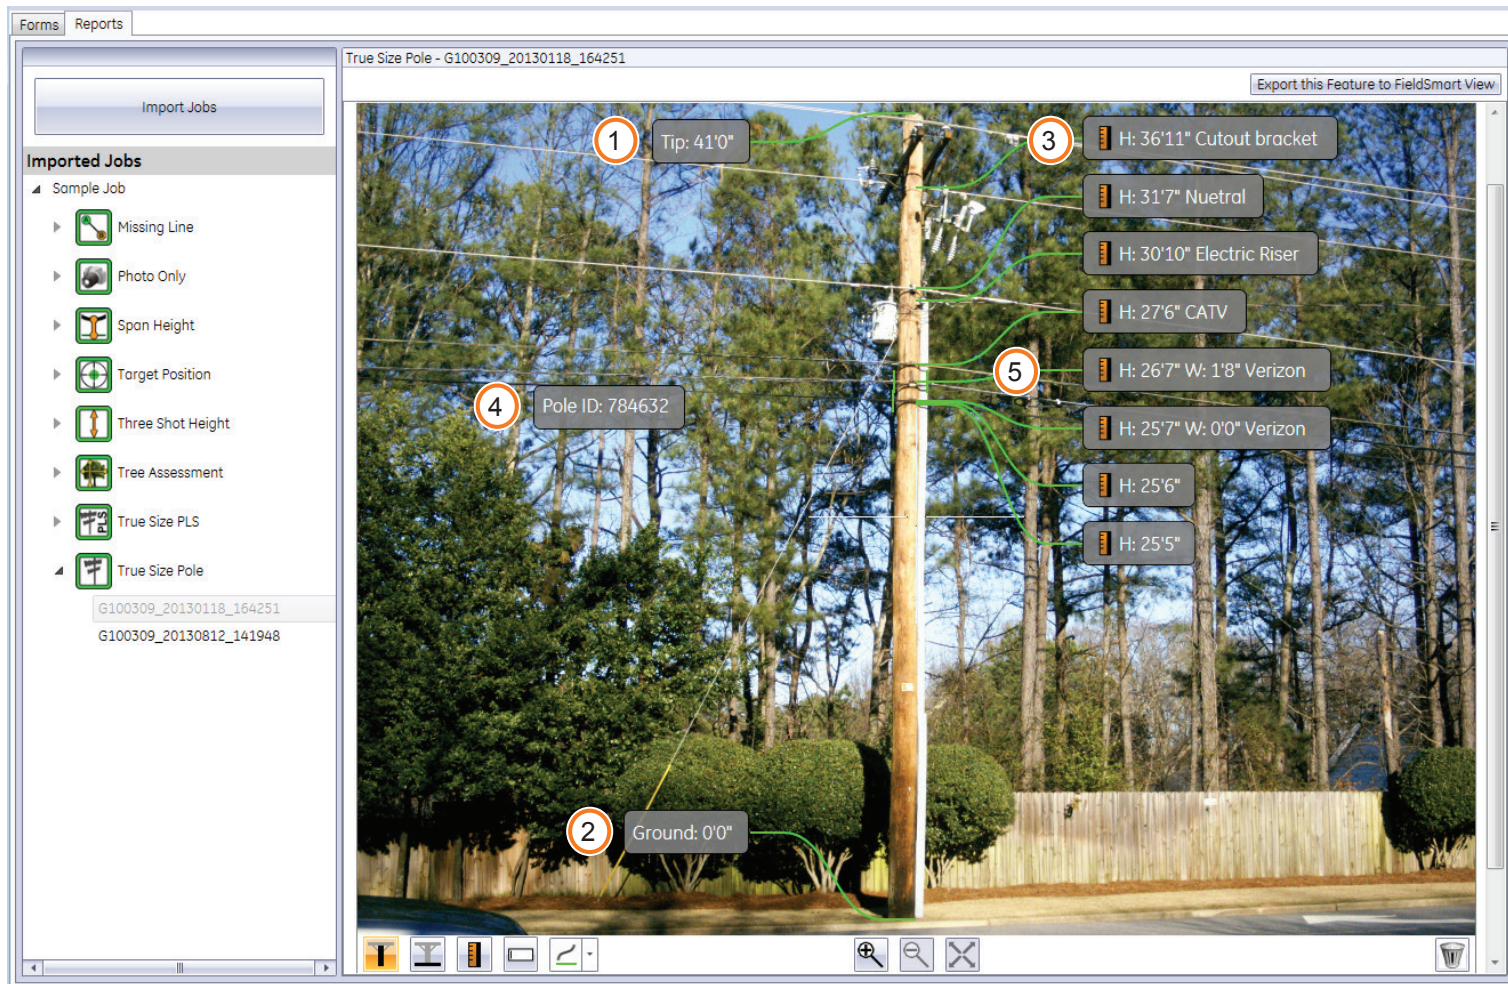

IKE desktop Height Measuring

1. Set the tip of the pole.
2. Set the ground level.
3. Measure attachment heights.
4. If needed, add labels to the photo.
5. If needed, change the line color.

All markups on the photo are saved automatically.

Tips:


- Zoom in and out by holding the Ctrl key and scrolling the mouse wheel.
- Pan around the photo by holding the left mouse button down and dragging.
- To delete a single measurement, select it and then press the Delete key.



Measuring Attachment Widths in IKE desktop



IKE desktop Width Measuring

1. Click on an attachment height.
2. Select  .
3. Click on the left side of pole. Use the arrows keys to move the calliper to the edge.
4. Click on the right side of pole. Use the arrow keys to move the calliper to the edge.
5. Click the check box.

All markups on the photo are saved automatically.



Custom Forms

By customizing your workflow using IKE desktop, speed up and get the best results for your application.

The screenshot displays the IKE desktop software interface for configuring a custom form. The main window is titled 'Forms' and 'Reports'. The 'FullPolePic' form is currently selected, showing its configuration details in the right-hand pane. The configuration includes a title, description, image, and a mandatory checkbox. Below the configuration, the 'Outputs' section lists various data fields that can be included in the form's output, such as Date, Time, Year, Month, Day, Hour, Minute, Second, ImageFilename, GpsFix, Pdop, LocalLatitude, LocalLongitude, LocalAltitude, Distance, and MagneticDeclination. The left-hand pane shows a 'Toolbox' with various tools and fields available for use in the form.


Property	Value
Title	FullPolePic
Description	Pole Audit image
Image	[Image Icon] Change
Mandatory	<input checked="" type="checkbox"/>

Output	Name
<input checked="" type="checkbox"/> Value	
<input checked="" type="checkbox"/> Date	FullPolePic.Date
<input checked="" type="checkbox"/> Time	FullPolePic.Time
<input type="checkbox"/> Year	FullPolePic.Year
<input type="checkbox"/> Month	FullPolePic.Month
<input type="checkbox"/> Day	FullPolePic.Day
<input type="checkbox"/> Hour	FullPolePic.Hour
<input type="checkbox"/> Minute	FullPolePic.Minute
<input type="checkbox"/> Second	FullPolePic.Second
<input checked="" type="checkbox"/> ImageFilename	FullPolePic.ImageFilename
<input type="checkbox"/> GpsFix	FullPolePic.GpsFix
<input type="checkbox"/> Pdop	FullPolePic.Pdop
<input type="checkbox"/> LocalLatitude	FullPolePic.LocalLatitude
<input type="checkbox"/> LocalLongitude	FullPolePic.LocalLongitude
<input type="checkbox"/> LocalAltitude	FullPolePic.LocalAltitude
<input checked="" type="checkbox"/> Distance	FullPolePic.Distance
<input type="checkbox"/> MagneticDeclination	FullPolePic.MagneticDeclination

If you have any difficulties using IKE software or need further information, please go to www.ikegps.com/support for assistance.



Custom Forms

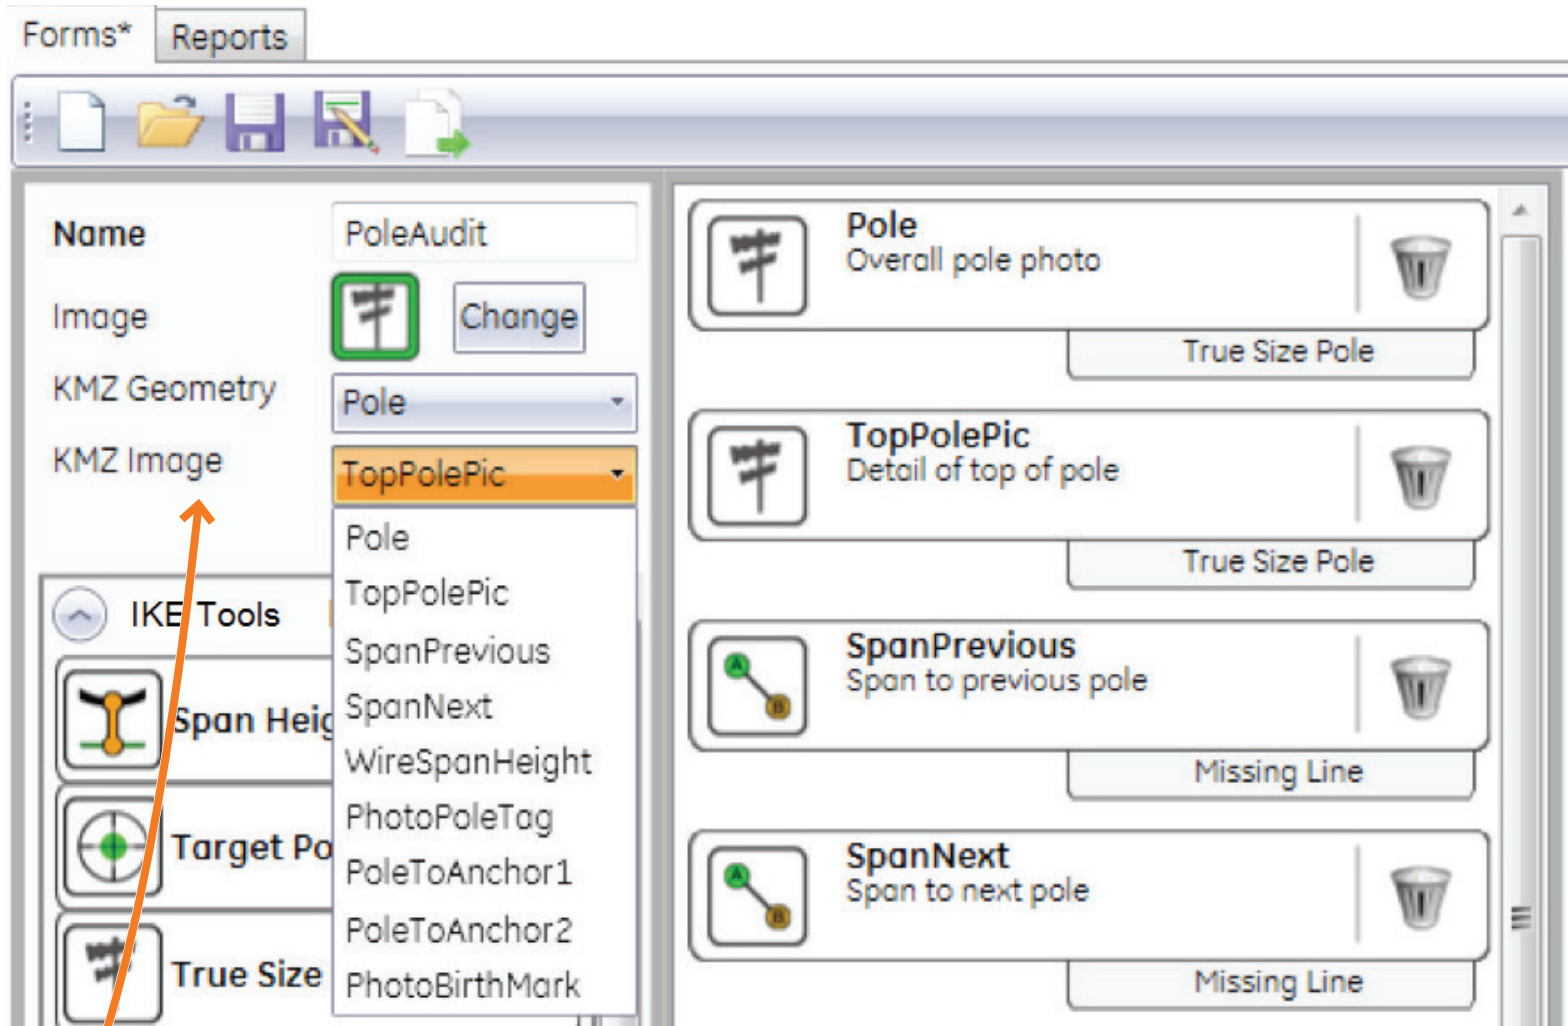

Tip:


If you have multiple measuring tools in the form, you can specify which one is to be used as the object location in a KMZ report by selecting the tool for “KMZ Geometry”. By the same token, you can specify which photo is to be included in the KMZ file by selecting the tool for “KMZ Image”. You can also change the icon that shows the data capture’s location position on the map.




Sub Forms

All fields and tools have a free-text attribute called 'Subform'. This field is used to define the subform that the given field/tool belongs to.

The assigned Subform is also shown on the form.

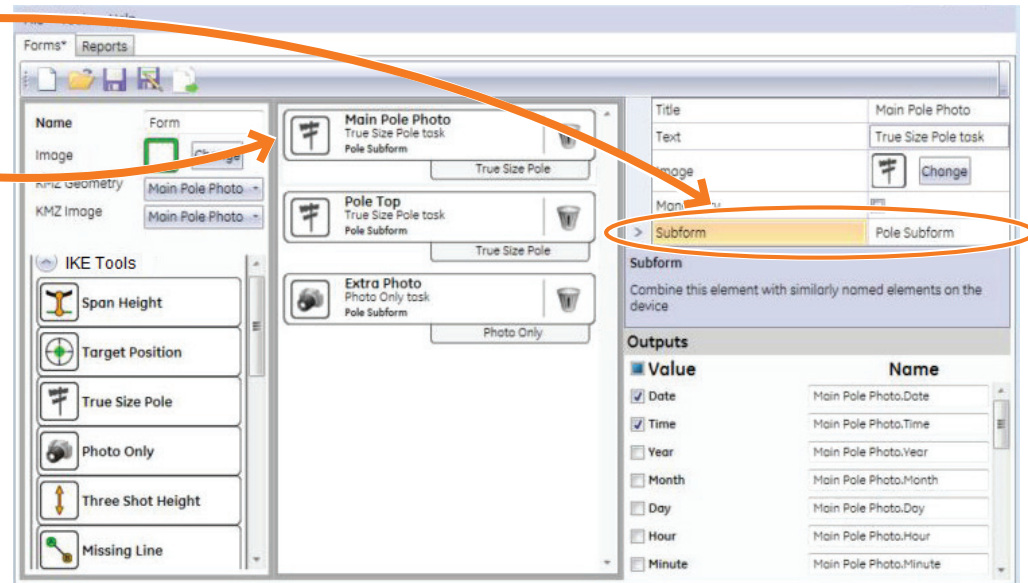


Once deployed, the subform will display on the device as shown:

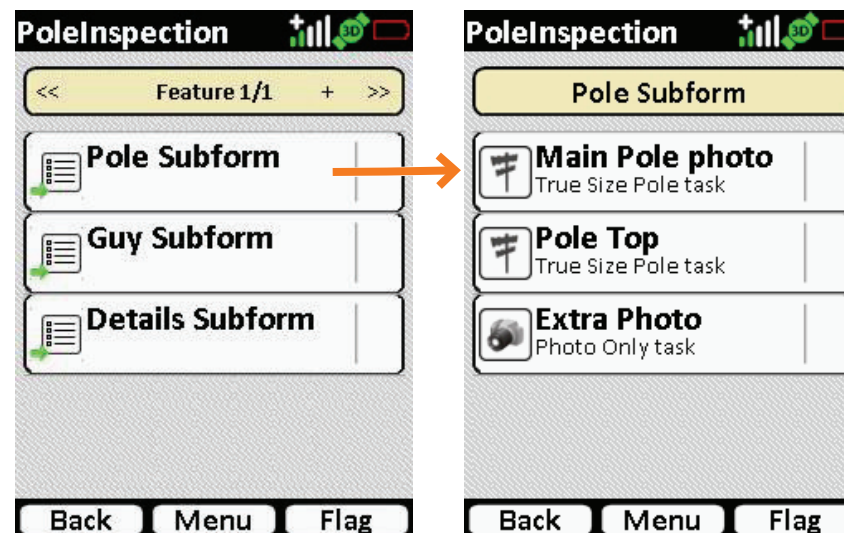



Flag a Feature

This function allows a user to flag a feature that has been captured for review at a later stage. On pressing the flag button the text changes to red (see below) to indicate that the feature has been flagged.

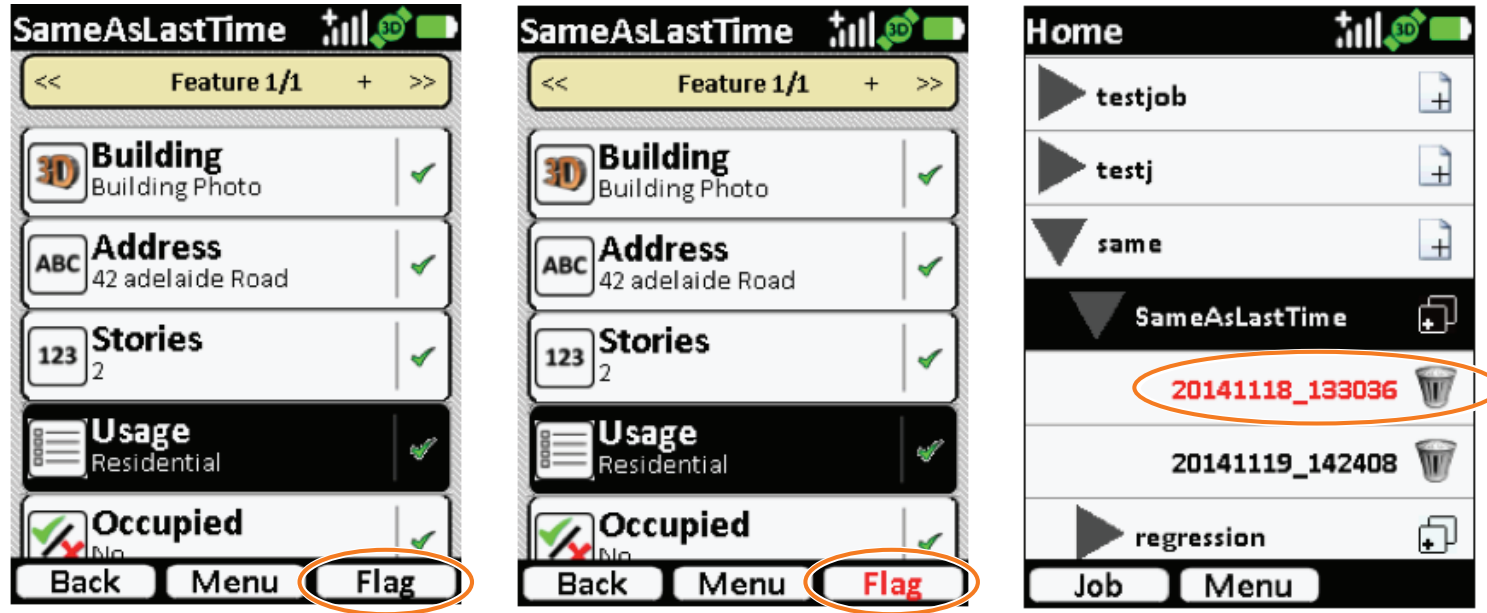


On the main menu, the feature will also be highlighted in red after it has been flagged. Tapping the flag button again 'unflags' the feature.

A typical real world scenario: if for some reason you cannot or choose not to complete capturing information for a pole, you can flag this pole as incomplete and move onto the next one. When reviewing your work via the home screen at a later point, you will see that one pole still requires more work and then resume capturing that information.




Nested List

Example: If you want to create a nested list for:

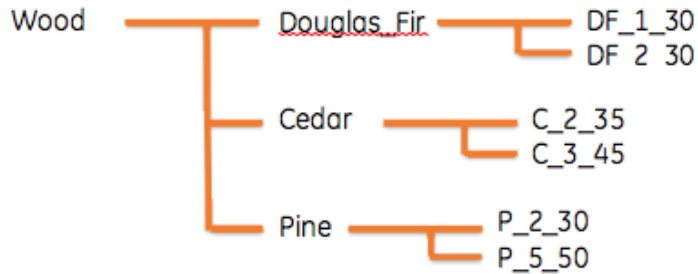

Aluminum

Composite

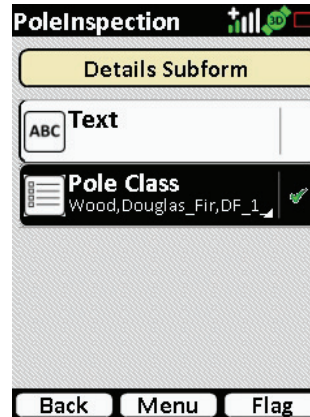

You can create nested lists by using the below syntax:

Wood__Douglas_Fir__DF_1_30, Wood__Douglas_Fir__DF_2_30,
 Wood__Cedar__C_2_35, Wood__Cedar__C_3_45,
 Wood__Pine__P_2_30, Wood__Pine__P_5_50

Note that nested levels are separated by “__” (double underscore).

The result is a nested list on the data collection form. When you select Wood, you will have the option to continue to select Douglas_Fir, Cedar or Pine. When you subsequently select Douglas_Fir, you then have the option to select DF_1_30 or DF_2_30, etc.

After completing a nested list it displays as shown:

